

Loading a Flatbed



GETTING
42,000
POUNDS





**S
a
f
e
t
y

F
i
r
s
t**

- ⇒ Make certain that tractor/jack stands are underneath trailer as necessary
- ⇒ Make sure trailer is chocked
- ⇒ No one is allowed on trailer to remove tarps at any time
- ⇒ Keep driver clear at all times while loading
- ⇒ Bales should be free of ice and snow
- ⇒ Stack bales side by side (8–10 on each side)
 - 1st and last rows, only 2 bales high, the balance 3 bales high
- ⇒ Load only 4 bales per side to avoid stress on kingpin and 5th wheel of tractor
- ⇒ Do not stagger top row of bales
- ⇒ Ensure bales do not hang over sides of trailer
- ⇒ Load few bales and have driver “approve” the method
- ⇒ Have driver sign off on paperwork and retain 1 copy for your records
- ⇒ For any issues call Rachel, with CTRA, at (512) 577-4439 before the driver leaves

PEP Rally!

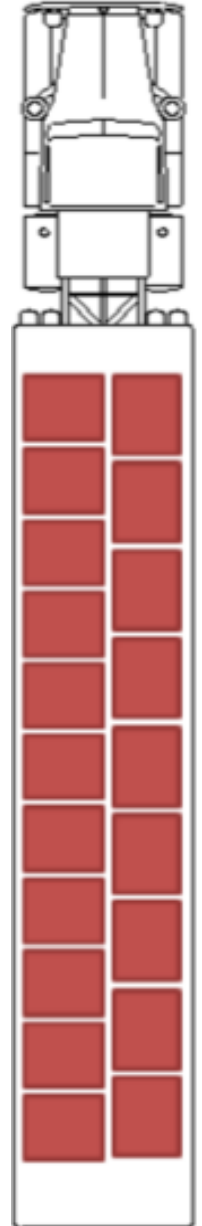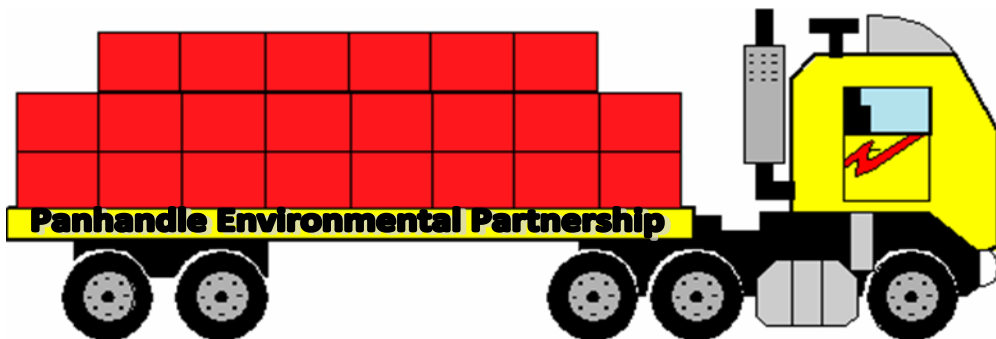

**Maximize the load
Either Option Works!**

